



VOLVO IMMO PRO TOOL v1.0

The VIMPT v1.0 device allows you to DISABLE the immobilizer function in VOLVO EURO6 platform trucks. This enables emergency engine starting in the event of lost original keys (the procedure takes only 3–5 minutes).

SUPPORTED MODELS (MY 2014 - 2025+, excluding FH Aero)

- FH4/FM4;
- Volvo Buses;
- Volvo/Penta Building machinery;
- Volvo UD Trucks.

PACKAGE CONTENTS

- 1) Laptop;
- 2) USB-OBD diagnostic adapter;
- 3) Cables;
- 4) Premium Tech Tool software;
- 5) Special Immo GO v1.5 software;
- 6) USB flash drive with video instructions.



Fig.1

- * Immo GO v1.5 software is required only for vehicles (10/2021 – 2025+, excl. FH Aero);
- * For pre-update models (2014–10/2021), Immo GO is not required.

IMMOBILIZER DISABLING PROCEDURE FOR VEHICLES PRIOR TO THE UPDATE (MY 2014 -10/2021)

- 1) Launch the **Premium Tech Tool** software (fig. 2); the program will automatically detect the vehicle;
- 2) Go to the **PROGRAM** tab and click the **Continue** button;
- 3) Select "**17030-3 Parameter, programming**" from the submenu and click the **Start** button;
- 4) After the program switches to "**17030-3 Parameter, programming**" mode (Fig. 3), click the **Continue** button;
- 5) The automatic **conditions check** will start (fig. 4), and once it is complete, click the **Continue** button;
- 6) The program will switch to **parameter selection** mode;
- 7) In the parameter filter, enter "**IMMO**" in the search field (fig. 5);
- 8) In the filtered list, find the lines "**ENABLE IMMOBILISER**" with the default value "**1**" and "**Immobilizer function Driver authentication activation**" with the default value "**True**";
- 9) To disable the immobilizer, set "**ENABLE IMMOBILISER**" to value "**0**" and set "**Immobilizer function Driver authentication activation**" to value "**False**";
- 10) To complete the procedure, click the **Continue** button and then the **Program** button;
- 11) **The procedure is complete.** To finish, click **EXIT** in the Premium TechTool window;
- 12) Turn off the ignition, wait **30 seconds**, and start the engine. The vehicle can be started with any key.

IMMOBILIZER DISABLING PROCEDURE FOR VEHICLES (MY 10/2021 - 2025+, excl. FH Aero)

- 1) Launch the **Premium Tech Tool** software (fig. 2); the program will automatically detect the vehicle;
- 2) Go to the **PROGRAM** tab and click the **Continue** button;
- 3) Select "**17030-3 Parameter, programming**" from the submenu and click the **Start** button;
- 4) After the program switches to "**17030-3 Parameter, programming**" mode (Fig. 3), click the **Continue** button;
- 5) The automatic **conditions check** will start (fig. 4), and once it is complete, click the **Continue** button;



Fig.2

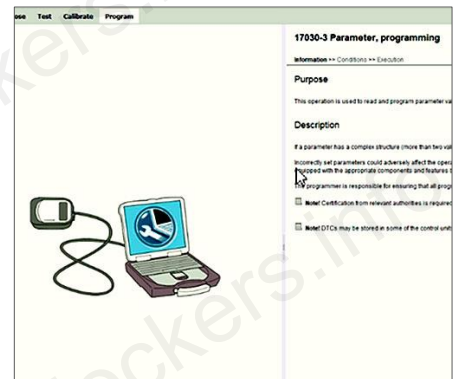


Fig.3

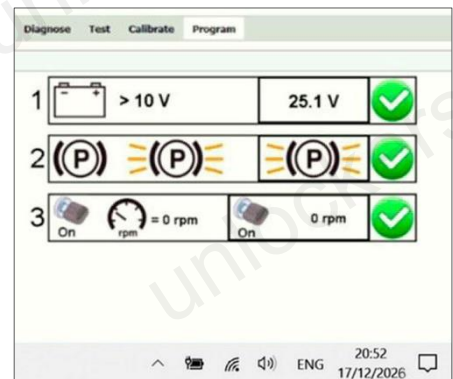


Fig.4

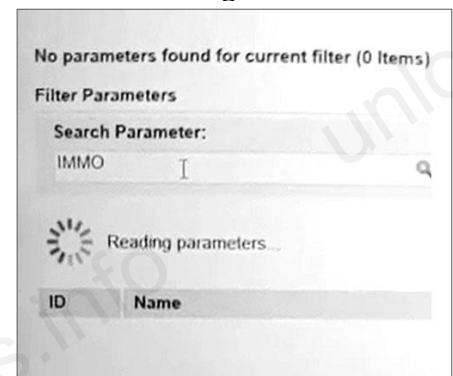


Fig.5

- 6) The program will switch to **parameter selection** mode;
- 7) Wait for the parameter reading to complete and **minimize** the **Tech Tool** window (**do not close the program, just minimize it!!!**);
- 8) Launch the **Immo GO v1.5** software (fig. 2), which will automatically disable the immobilizer (**the process takes 3–5 minutes**);
- 9) After the procedure is complete, a success message "**Ignition off, wait 5s, START THE ENGINE**" will appear;

* *In case of an error during execution (sometimes on the first run), repeat the procedure using Immo GO — the error does not occur on the second attempt.*

- 10) **The procedure is complete.** To finish, click **EXIT** in the Premium Tech Tool window;
- 11) Turn off the ignition, wait **5 seconds**, and start the engine with any key.

* *Note: Future updates of the Immo GO and Tech Tool software will include expanded and improved features.*

This device is intended as a temporary emergency solution for auto repair shops, dealers, and police officers. It is not intended for permanent use!